Teledyne Oceanscience

Z-Boat[®] 1800-RP

Remotely-Operated Hydrographic Survey Boat




Maximize Hydrographic Survey Efficiency

The Teledyne Oceanscience Z-Boat® 1800-RP with new ruggedized design and interchangeable sensor well, offers an entirely new option for high-resolution shallow-water hydrographic surveying. Get multibeam bathymetry data where conventional methods are not feasible or safe, and avoid mobilizing a workboat or vessel of opportunity. The Z-Boat 1800-RP uses advanced radio telemetry to offer remotely-operated hydrographic surveys. All data is accessible in real time, giving the operator total control over the survey process. Z-Boat navigation is easy using the GNSS position and heading available onboard, and remotely viewed at the operator location. Data processing is available in real time through CARIS Onboard™.

The Z-Boat 1800's new ruggedized design is IP67-rated and incorporates a modular deck structure for antennas, cameras, and additional sensor mounting, making this Z-Boat ideal for shallow coastal mapping applications. The ruggedized package also includes an interchangeable sensor well, which accommodates a range of instruments including the Teledyne Odom MB1, MB2, and CV100, various Teledyne RDI ADCPs and Tritech Side Scan Sonars. Custom sensor integrations are available. Sensors are easily interchanged from beneath the vehicle.

A drone upgrade with waypoint navigation is available to offer laser-straight survey lines and precise positioning for large area or repeating surveys.



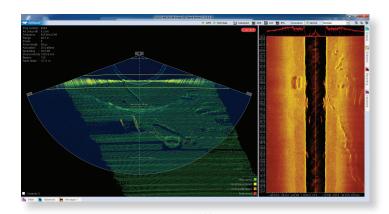

PRODUCT FEATURES

- New ruggedized IP67-rated design with interchangeable sensor well
- Optional autonomous operation and on-board datalogging
- Exisiting GNSS equipment can be used

- Up to 5m/s (16fps) performance
- Compatible with industry standard acquisition packages
- Customizable payload
- Two person portable; under 150lbs (typical configuration)

TELEDYNE OCEANSCIENCE Everywhere**you**look[™]


A Teledyne Marine Company


Z-Boat 1800-RP

Remotely-Operated Hydrographic Survey Boat

TECHNICAL SPECIFICATIONS

Boat length	1.8 m
Boat width	1 m
Boat height	1.1 m
Weight of base boat	38 kg
Payload	30 kg
Hull material	UV-Resistant ABS
Propulsion	Dual brushless 24V DC outdr
REMOTE	
Navigation remote	Hitec with Vessel Telemetry
Navigation remote frequency	2.4GHz FHSS
Navigation remote range	1200 m
Data telemetry range- 5GHz MIMO	Up to 2 km
Data telemetry range- 4GLTE	Worldwide
PERFORMANCE	
Typical survey speed	3-3.5 knots
Top speed	8 knots
Battery endurance	Up to 4.5 hours
Battery chemistry	NiMH or Li-ion

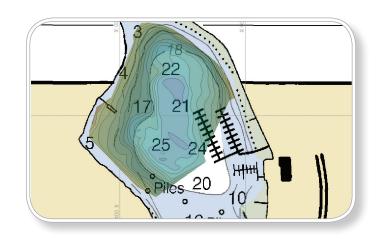

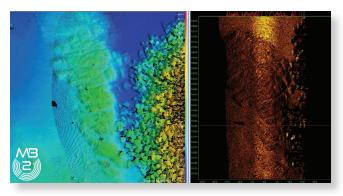

INSTRUMENTATION OPTIONS

Teledyne Odom MB2 Multibeam Echosounder Teledyne Odom MB1 Multibeam Echosounder Teledyne RD Instruments ADCPs Tritech Side Scan Sonars HD video cameras Robotics options available Compatible with other sensors on the market Custom sensor integration available





Teledyne Oceanscience

14020 Stowe Drive, Poway, California 92064 USA Tel +1 760-754-2400 • Fax +1 760-754-2485

Specifications subject to change without notice.02/2016. ©2016 TELEDYNE OCEANSCIENCE, a business unit of Teledyne Instruments, Inc. Other products and company names mentioned herein may be trademarks and/or registered trademarks. CARIS Onboard TM is a trademark of CARIS (Universal Systems, Ltd.).